


# Instructions to replace thermal sensor.

Figure 1



Figure 2

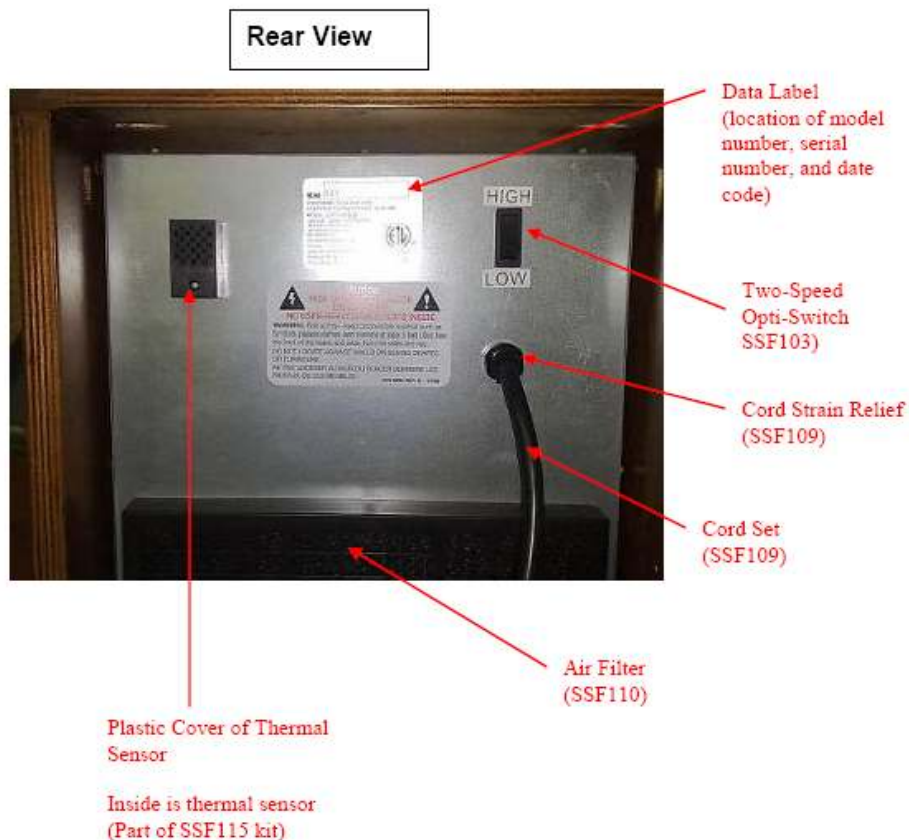

1. Remove the 5 screws at rear of unit to remove the heater from cabinet.
2. Remove small Phillips screw from thermal sensor cover at rear of unit. (See figure 2).
3. Unplug sensor wire white connector from thermal sensor inlet terminal at front of unit. (See figure 1)
4. Install new sensor.